



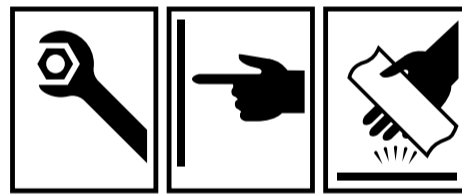

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικό Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD, .....

- 1 - B 961936 XX
- 2 - A 963751 XX
- 3 - B 961935 XX
- 4 - B 961660 NU - RH
- 4a - B 961659 NU - LH
- 5 - B 961659 NU
- 6 - B 961922 XX
- 7 - A 964520 NU
- 8 - A 961230 AA  
B 961800 XX
- 9 - B 960389 NU
- 10 - B 960900 XX

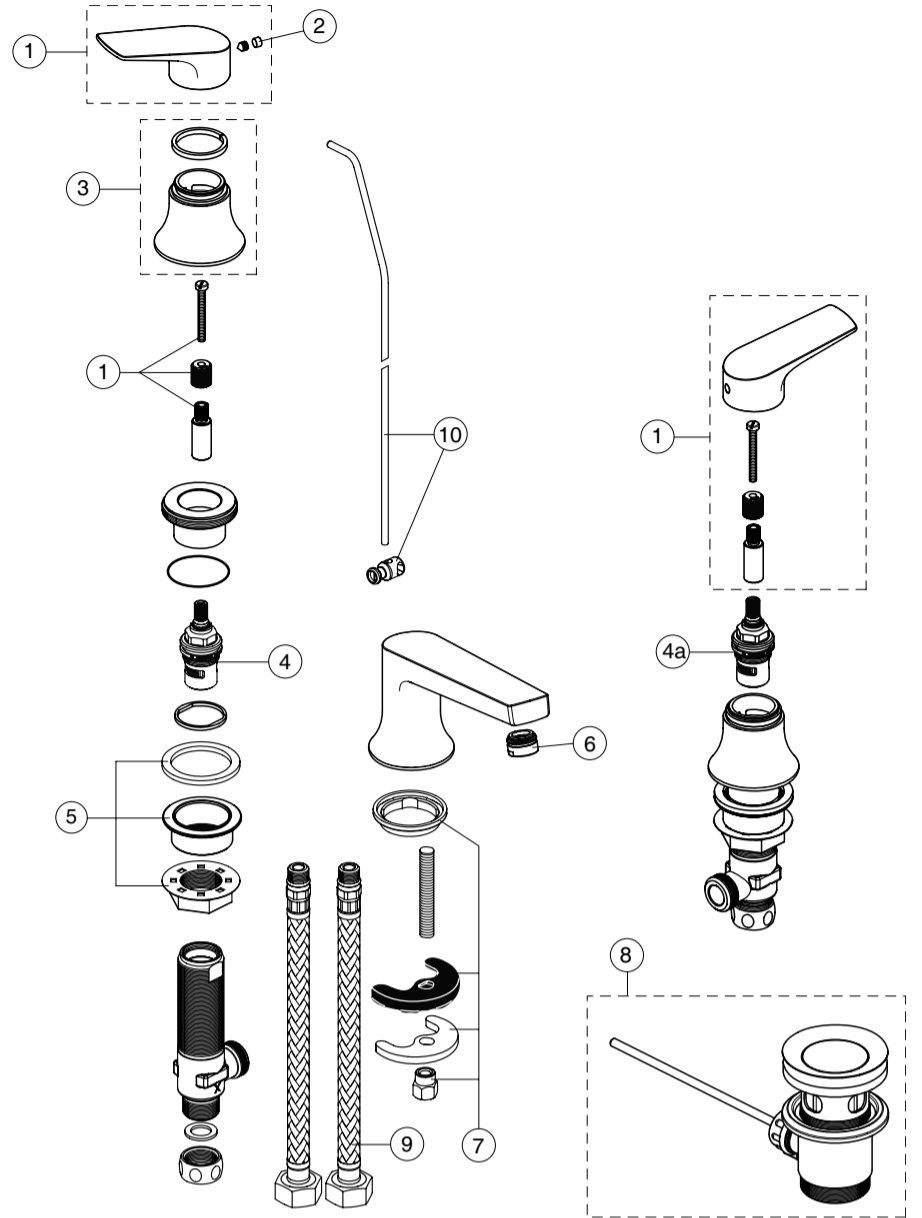




LDV




Ideal Standard


02.2024 / B565337

B D661 ..

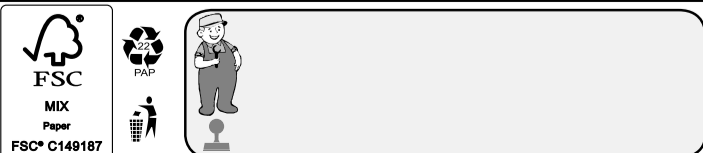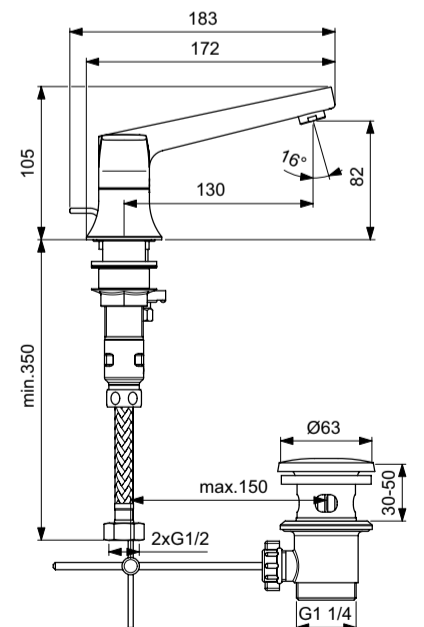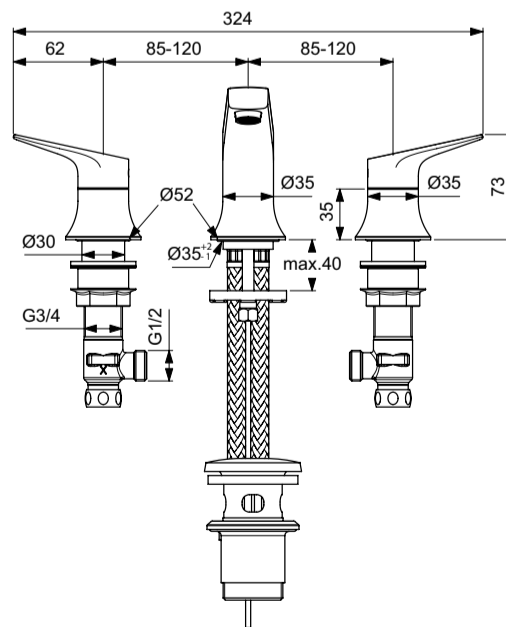

Ideal Standard International NV  
Corporate Village – Gent Building  
Da Vincilaan 2  
1935 Zaventem  
Belgium  
<https://www.idealstandard.com>

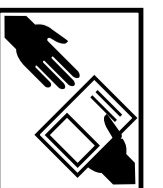

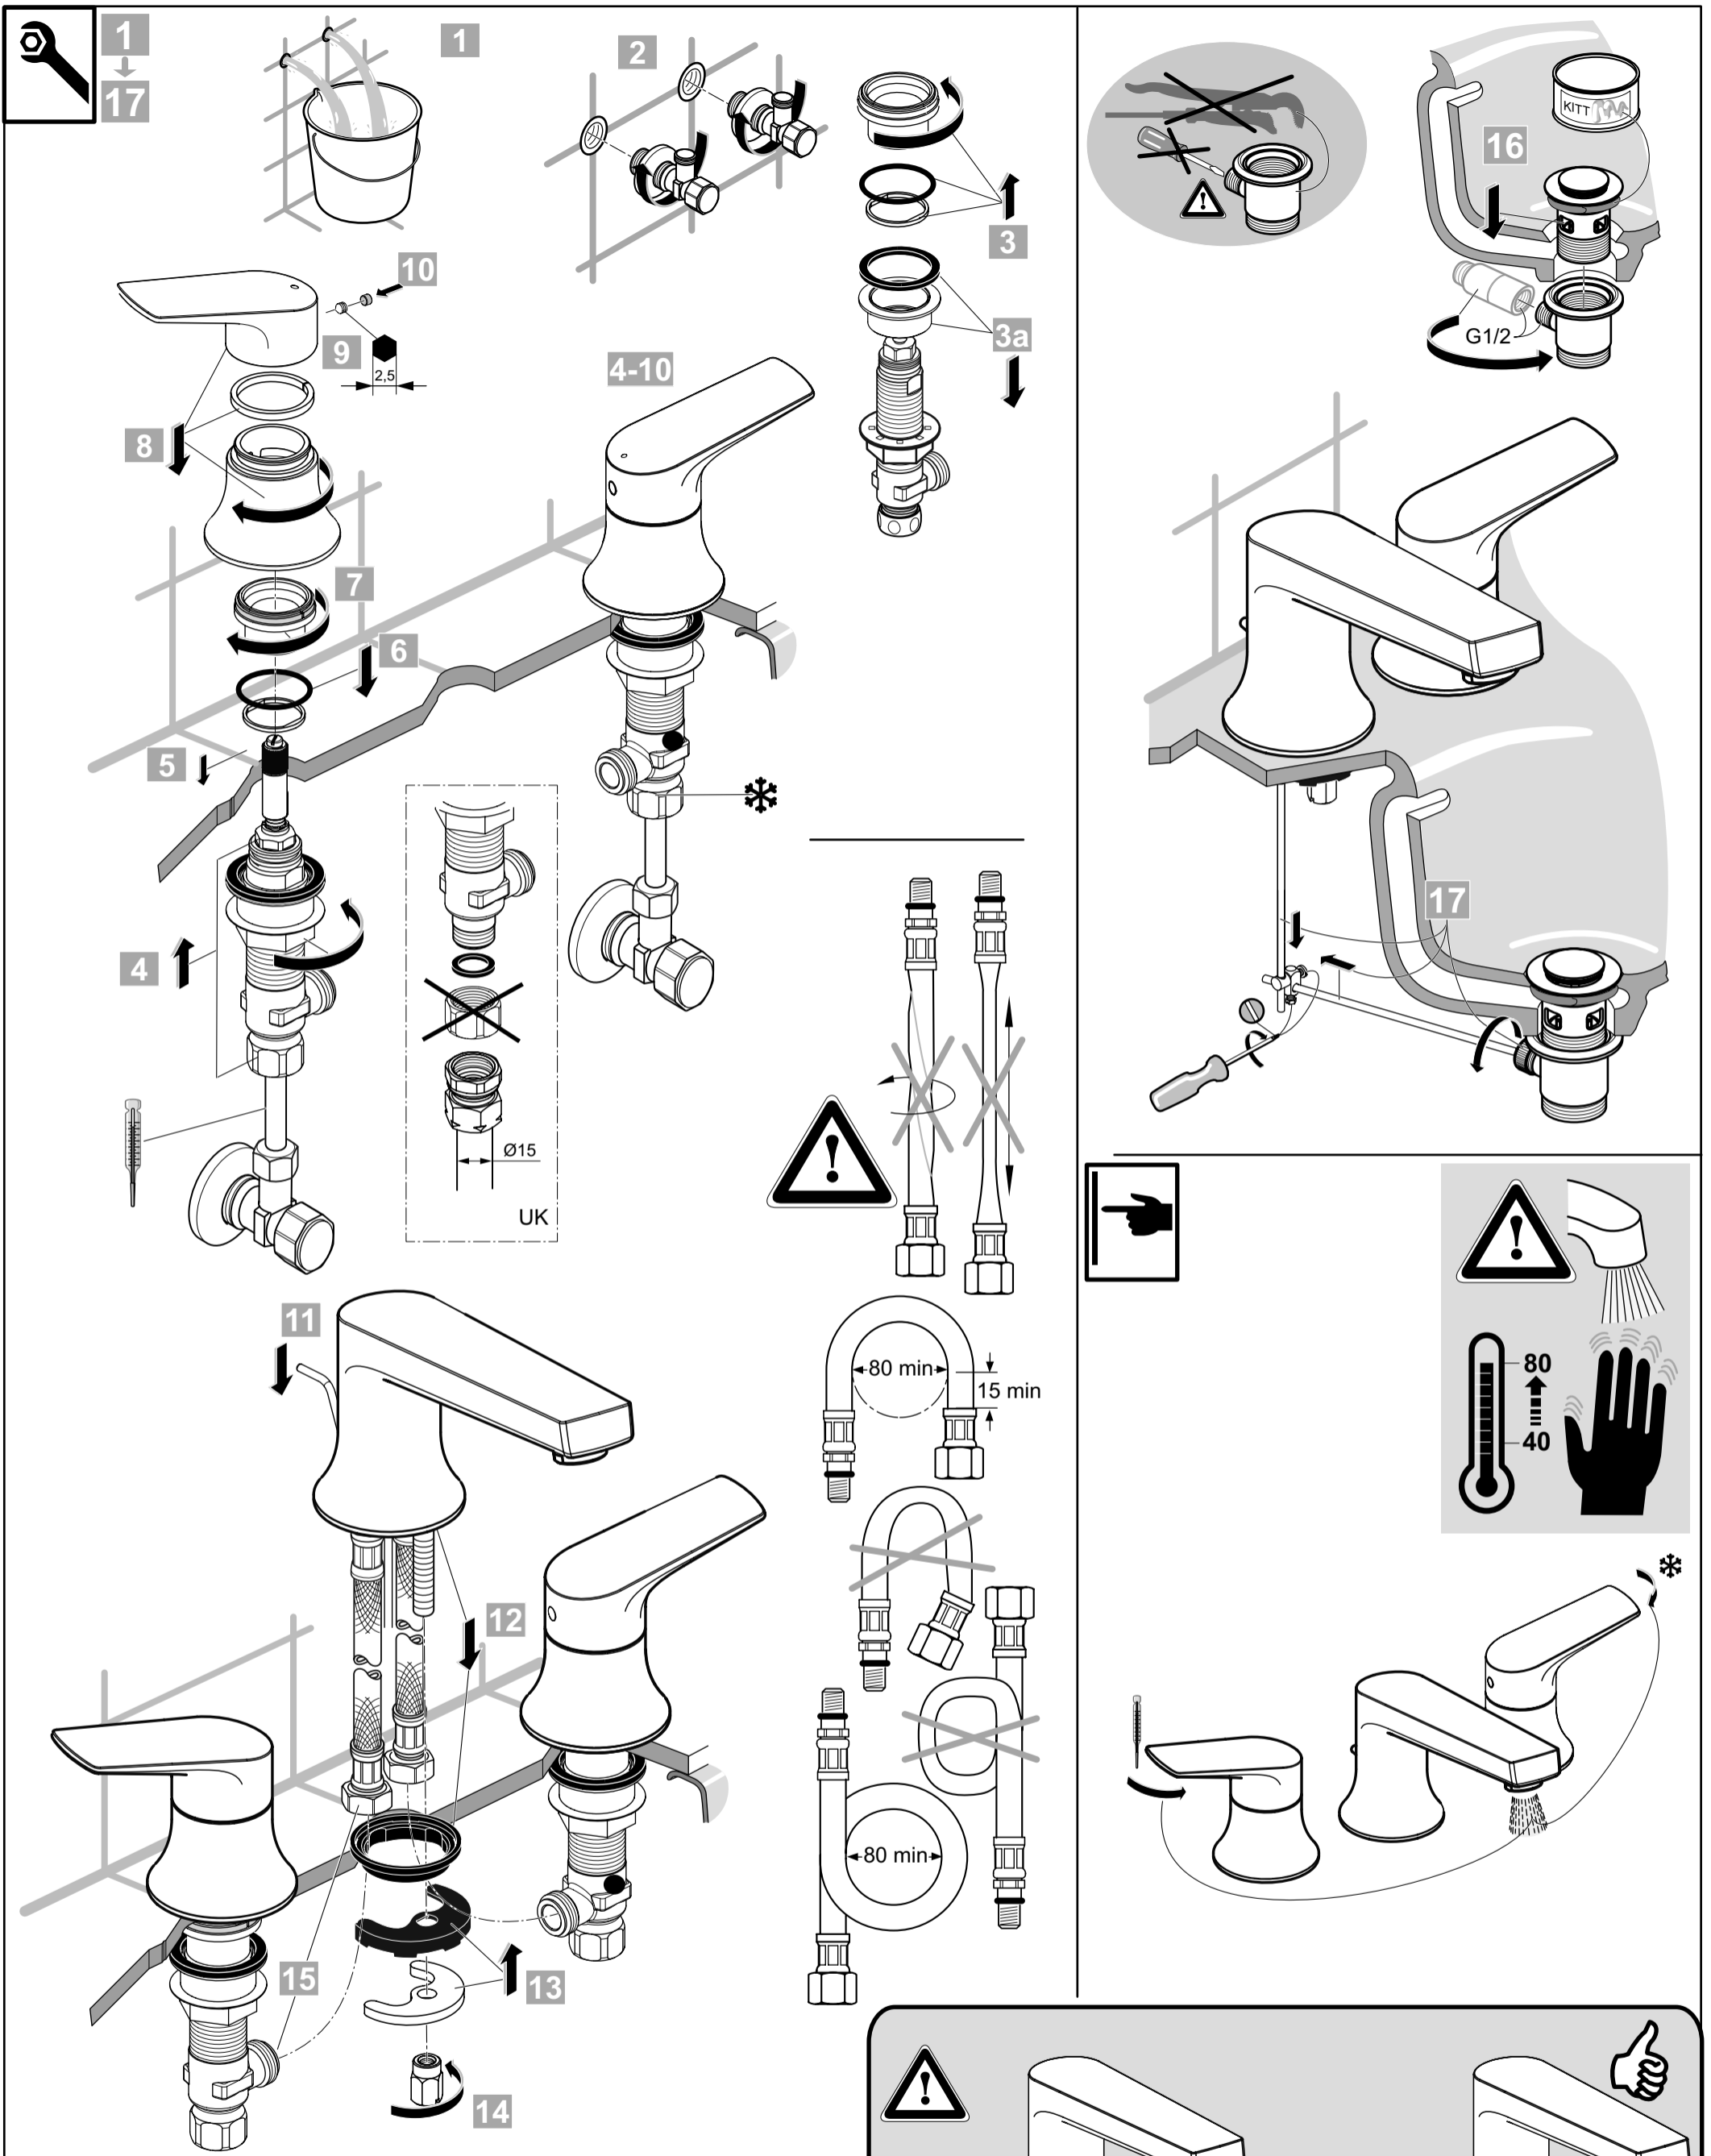

|  |          |     |  |  |  |                     |
|--|----------|-----|--|--|--|---------------------|
|  | <b>P</b> | bar |  |  |  | <b>Q</b><br>(3 bar) |
|  | <b>T</b> | °C  |  |  |  | <b>l/min</b><br>3,8 |

