



Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,



- 1 - B 961929 XX
- 2 - A 963751 XX
- 3 - B 961915 XX
- 4 - B 961916 NU
- 5 - B 961920 NU
- 6 - B 961922 XX
- 7 - B 960608 NU
- 8 - A 961230 AA
- 9 - B 961800 XX
- 10 - B 960900 XX
- 11 - A 861421 XX
- 12 - B 961901 NU
- 13 - A 960196 NU

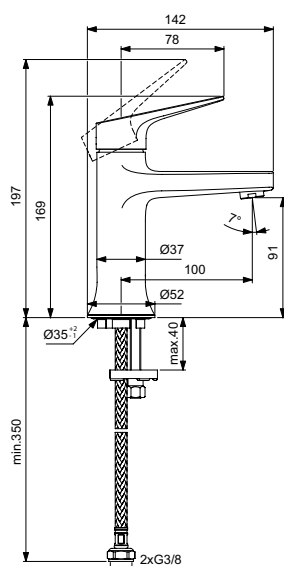

B D656 ..

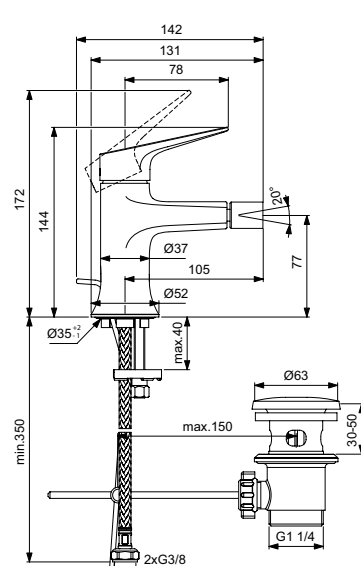



B D664 ..

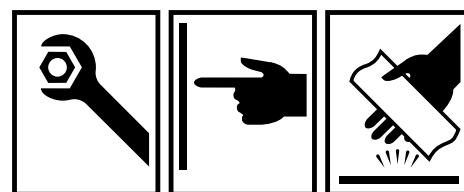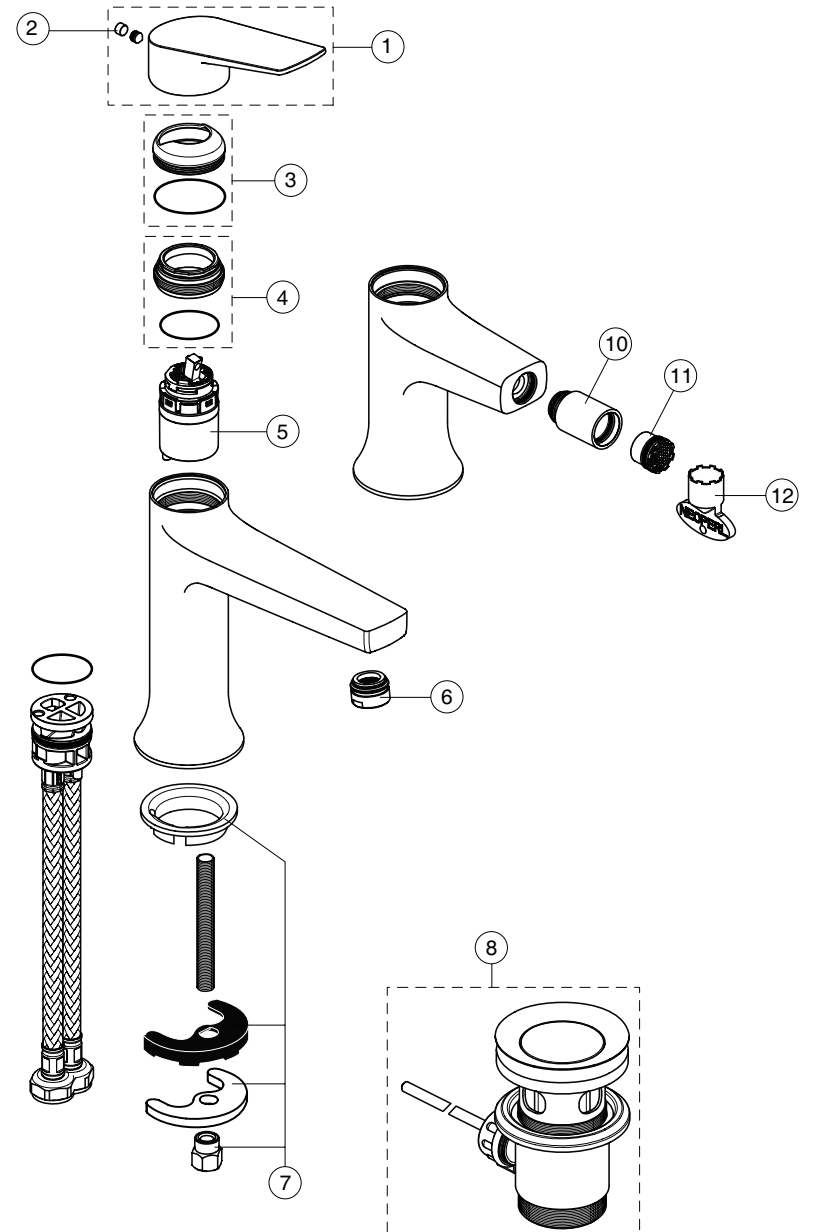


Ideal Standard

LDV


11.2023 / B565335

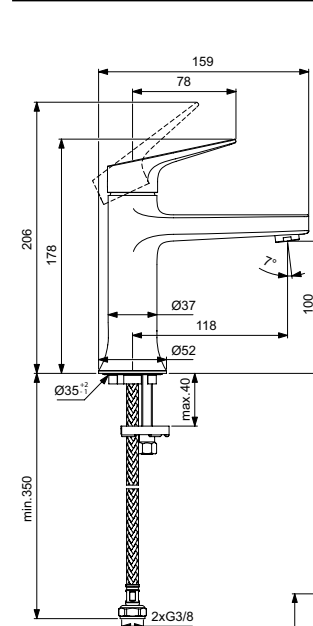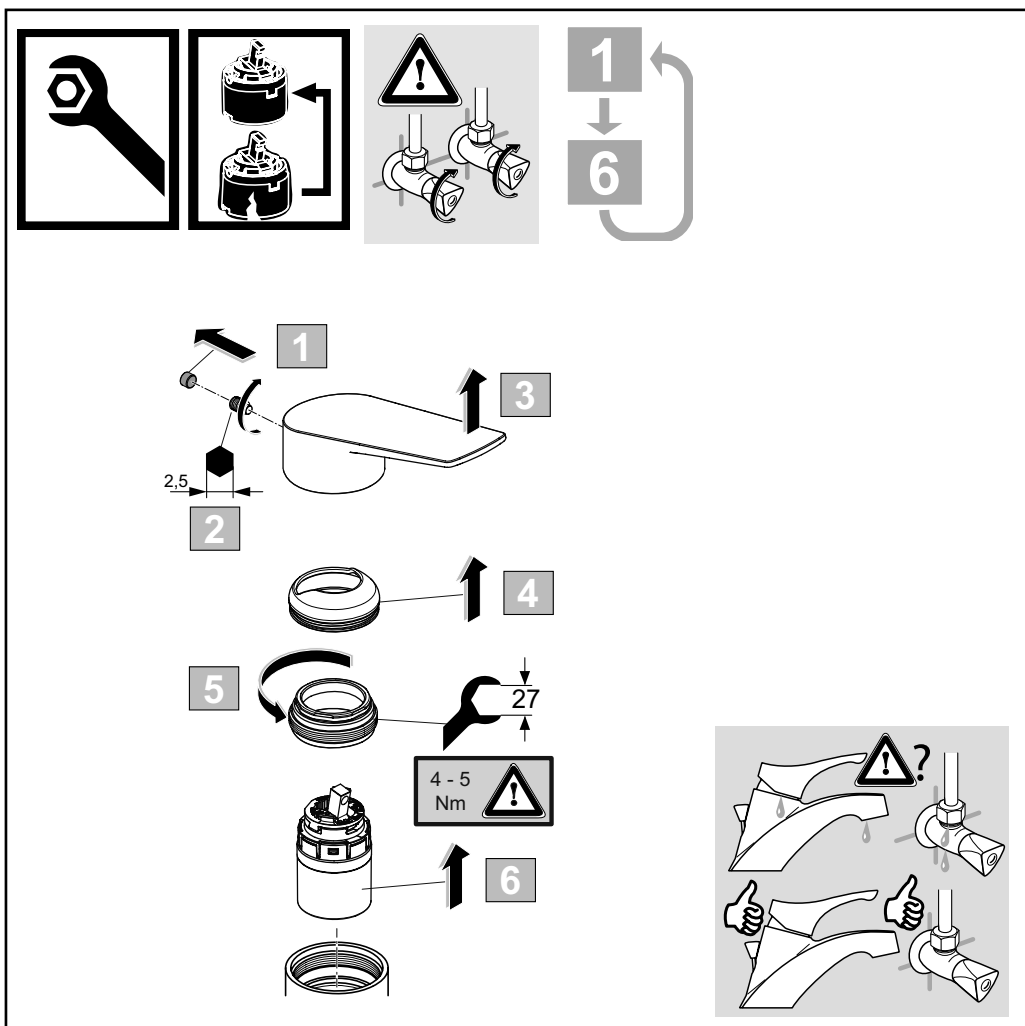

B D654 ..

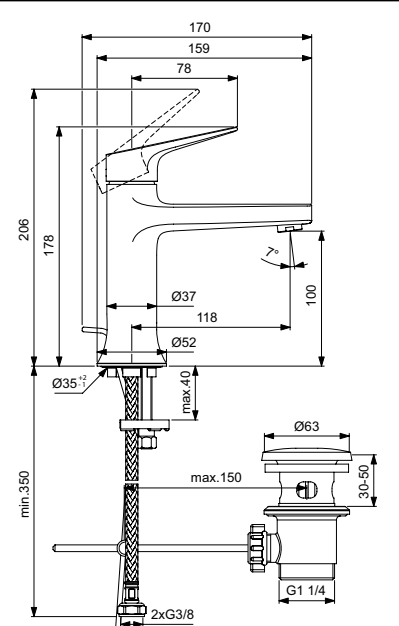

B D653 ..

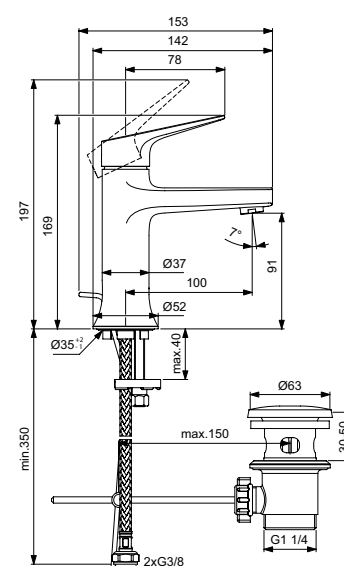

B D655 ..



Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<https://www.idealstandard.com>

