





 
DE Bedienungsanleitung | EN Operating instructions

NL Handleiding | FR Instructions de service | IT Istruzioni per l'uso | ES Instrucciones de funcionamiento | PT Manual de instruções | DA Betjeningsvejledning | NO Bruksanvisning | SV Bruksanvisning | FI Käyttöohje | ET Kasutusjuhend | LV Lietošanas instrukcija | LT Naudojimo instrukcija | PL Instrukcja obsługi | CS Návod k použití | RU Инструкция по эксплуатации | UK Інструкція з експлуатації | SK Návod na obsluhu | HU Kezelési útmutató | RO Instrucțiuni de utilizare | SL Navodila za uporabo | HR Upute za rukovanje | BG Ръководство за работа | EL Οδηγίες χειρισμού | TR Kullanım kılavuzu | AR دليل الاستخدام | ZH 操作说明书 | JA 取扱説明書 | KO 사용 설명서 | ID Petunjuk Pengoperasian | TH คู่มือการใช้งาน | VI Hướng dẫn sử dụng | HI उपयोगकर्ता मैनुअल

305.800 / 01.2025

FLOWLINE ZERO





FLOWPOINT ZERO

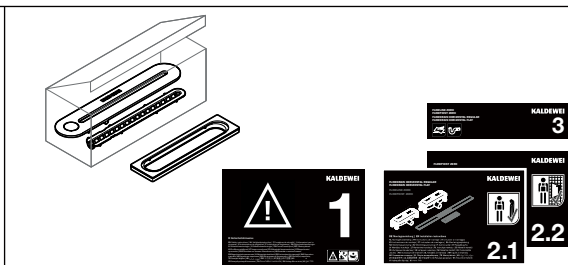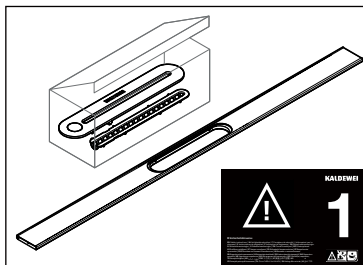



1.

2.

 
6872.7760.0930 (stainless steel)
6872.7760.0931 (champagne)
6872.7760.0932 (graphite)
6872.7760.0676 (black)
6872.7760.0711 (alpine white)

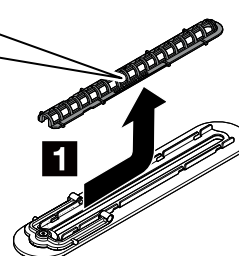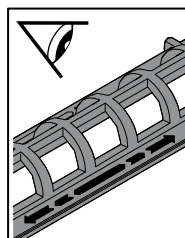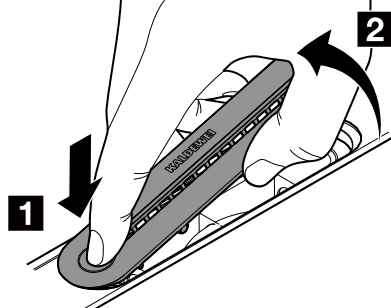




6872.7761.0000

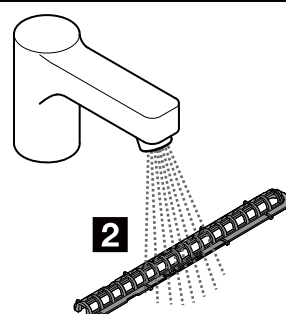 


3.

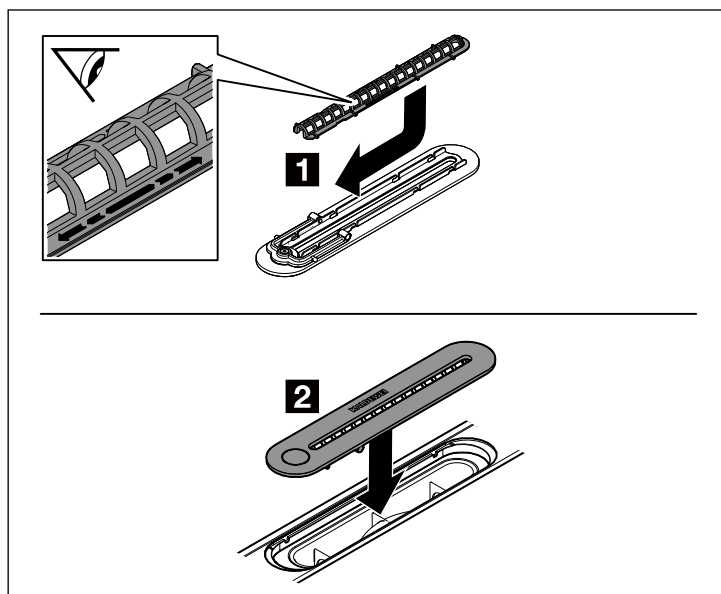


4.

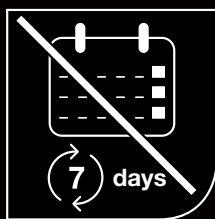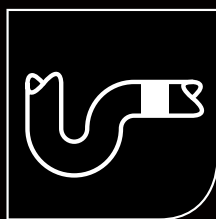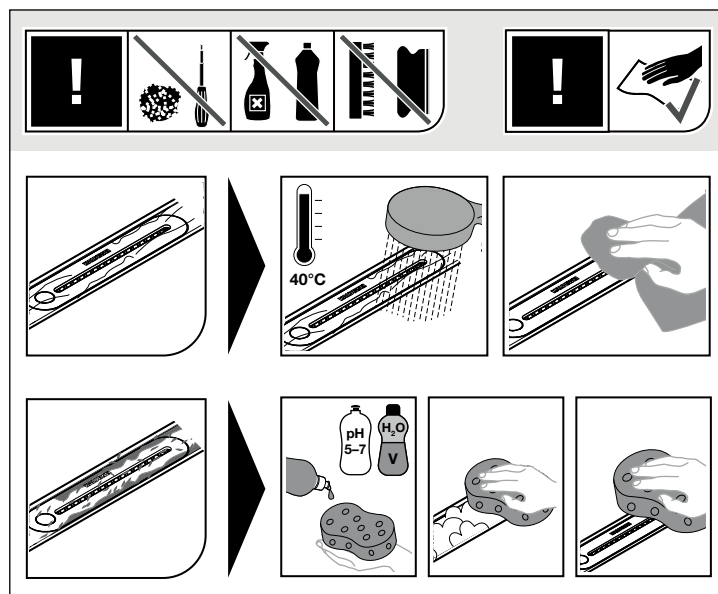

1.

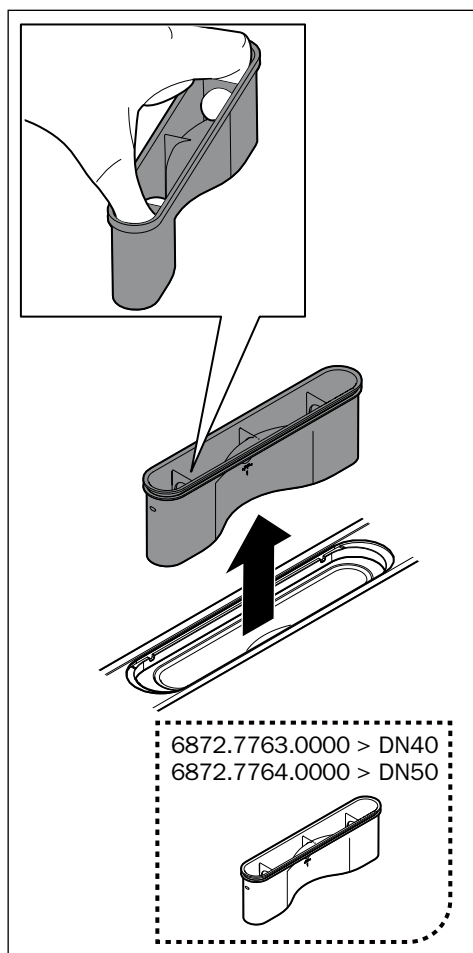

2.

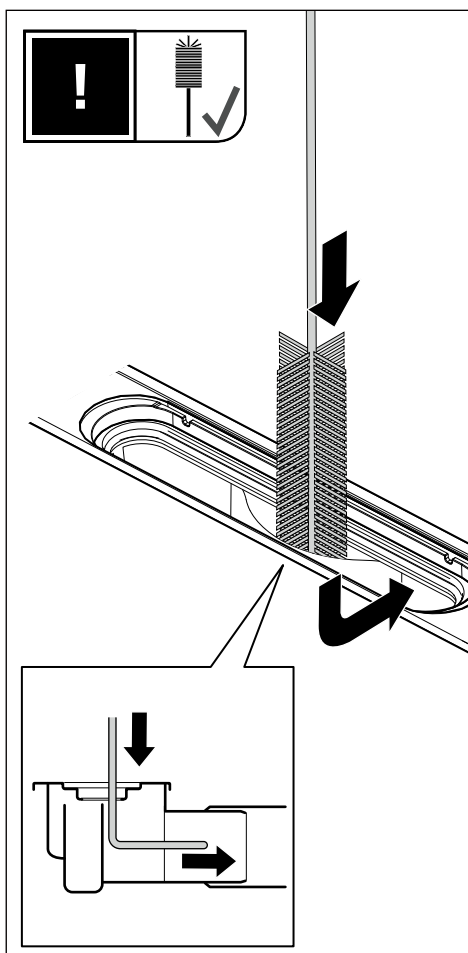

3.

