
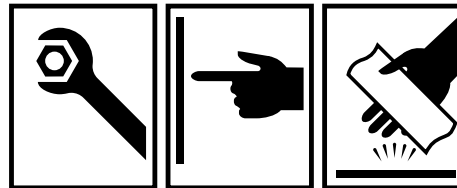


Ordering spares / Ersatzteil - Regelung / Pièces de rechange /
Parti di ricambio / Lista de recambios / Onderdelen bestellen
(NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele
/ Beställning av reservdelar / Bestilling av reservedeler /
Резервни части / Запчасти / Części zapasowe / Piese de
schimb / Rendelhető alkatrészek / Запасні частини / Резервни
делови / Резервни делови / Atsarginių dalių / Tellitavad varu-
osad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek
parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - A 861437 NU
- 2 - B 961933 XX
- 3 - A 861450 XX
- 4 - A 962002 NU
- 5 - A 960196 NU

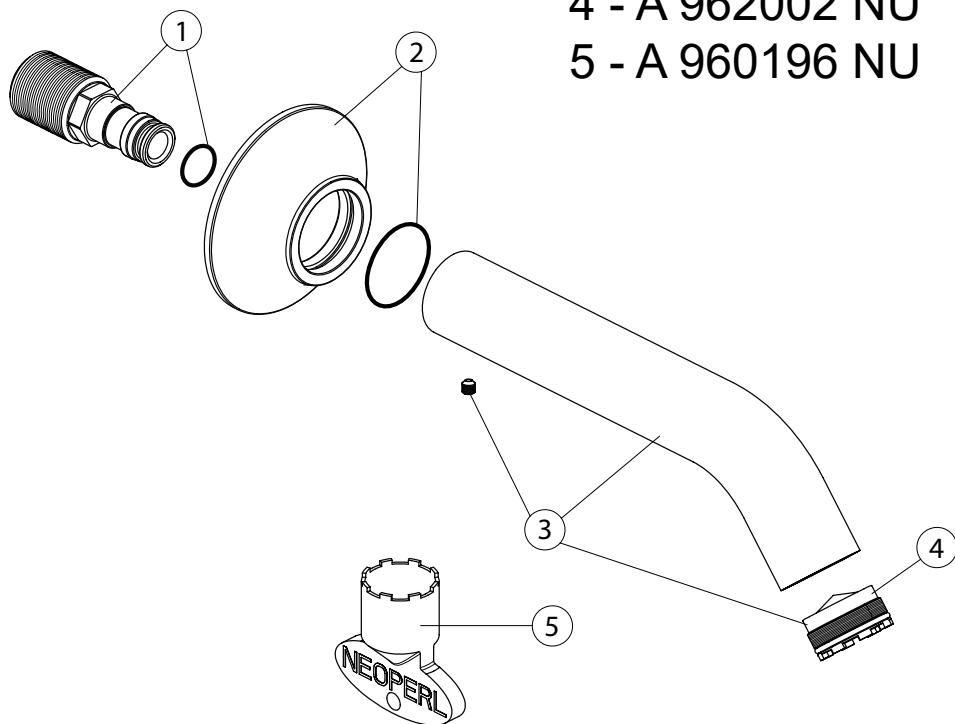


LDV



Ideal Standard


06.2024 / B565343

B D672 ..

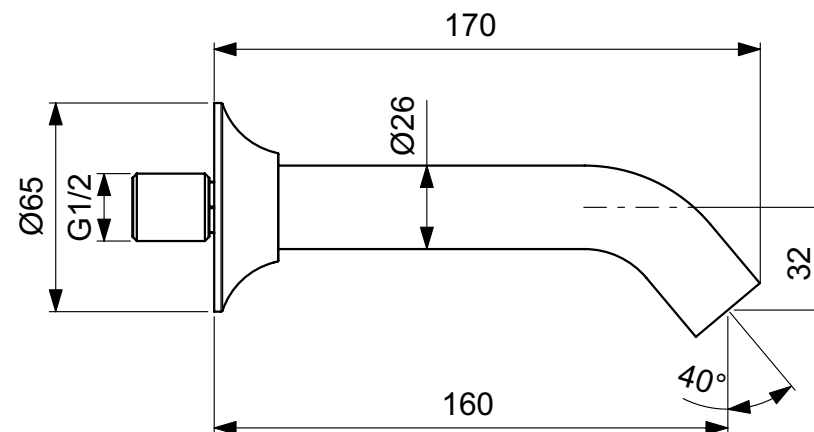


Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

<http://www.idealstandardinternational.com>



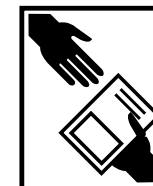




1
↓
7

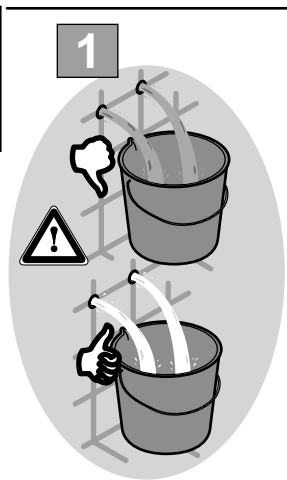

2

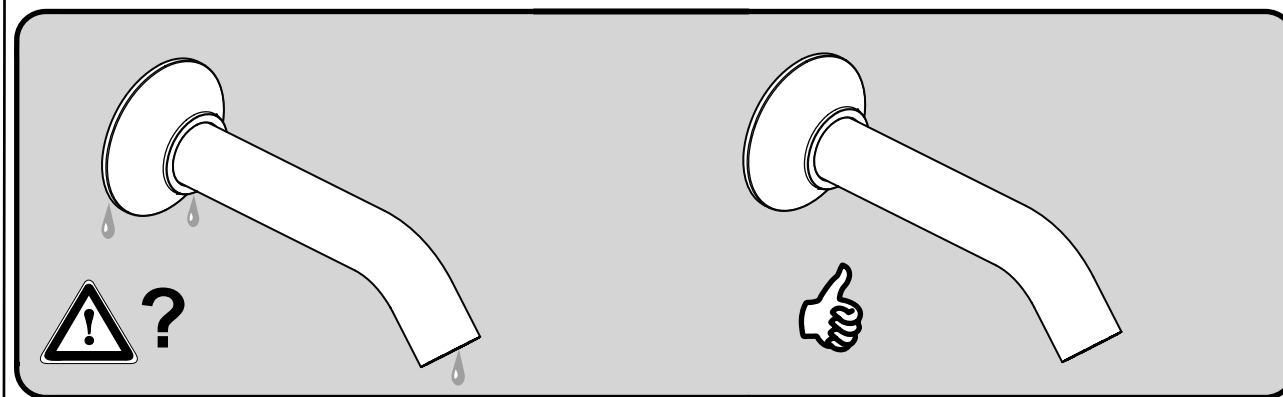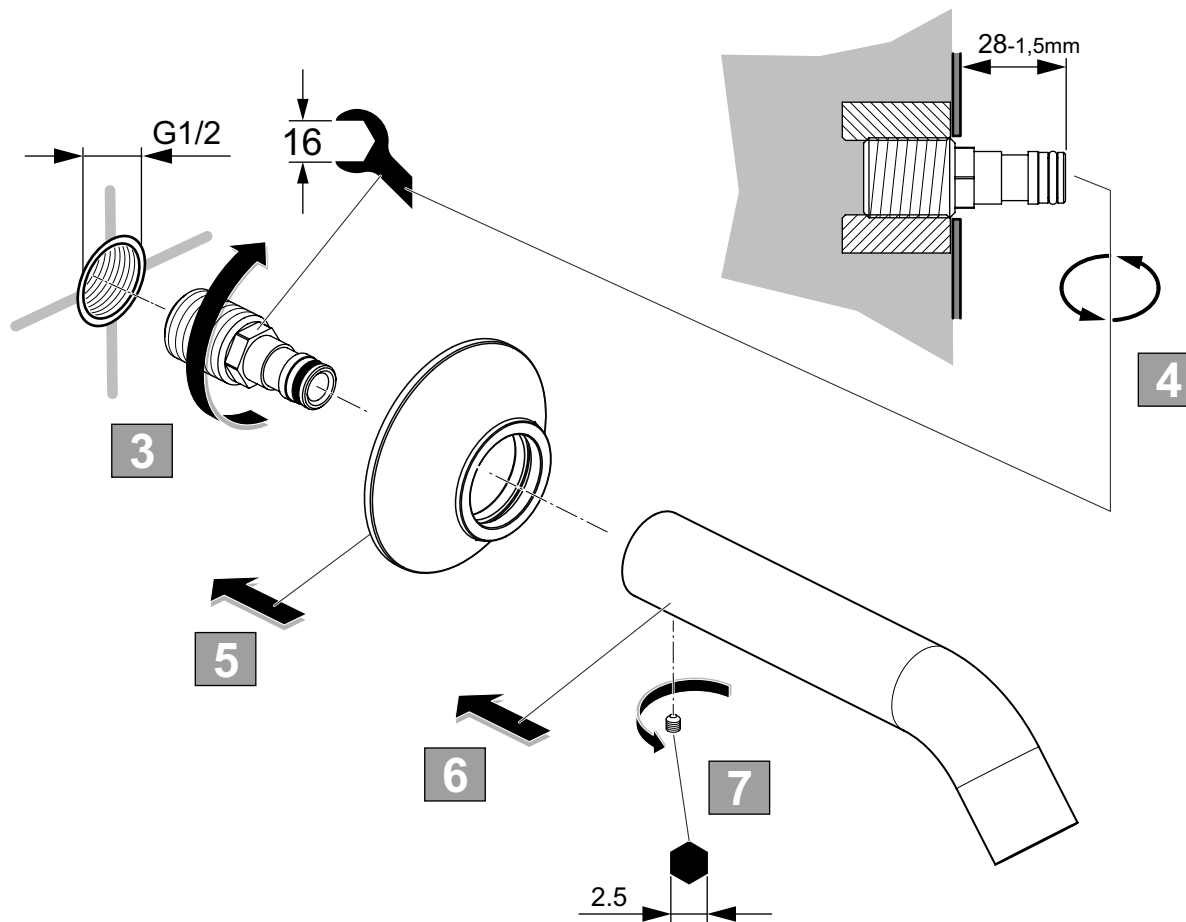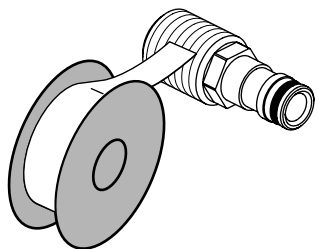

	P	bar	MIN. 0,5		MAX. 5
	T	°C	MIN. 10	MAX. 80	