
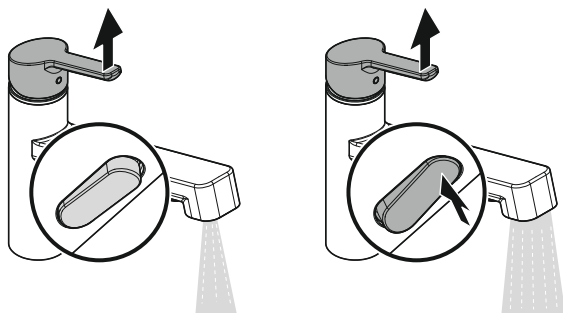
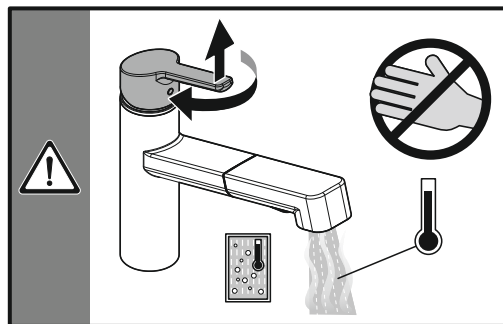
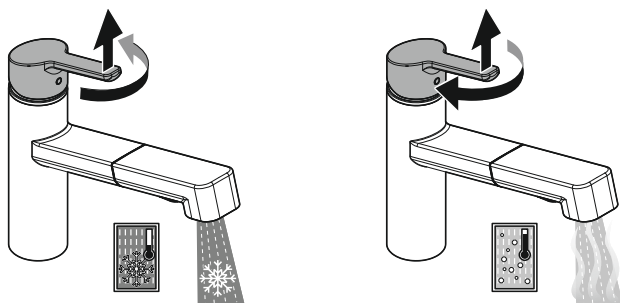
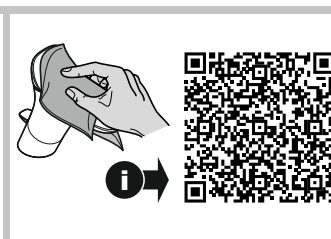
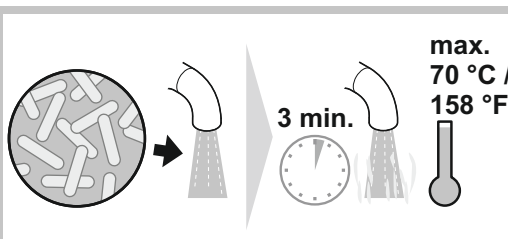
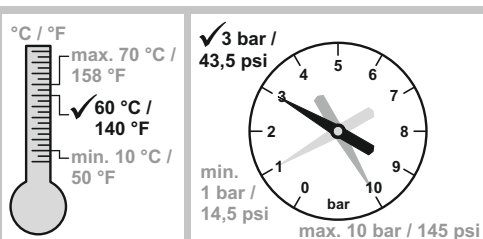
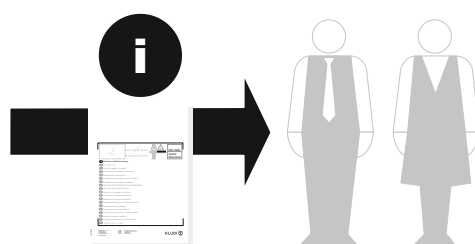


DIN EN 806
DIN EN 1717
DIN 1988
Global
Standards

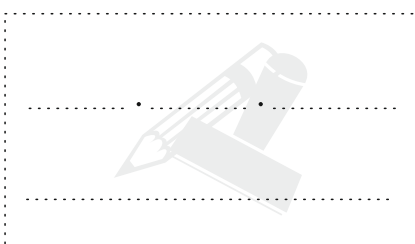

Ⓛ Montage- und Bedienanleitung

ⒸN 安装及操作指南

ⒸZ Návod k instalaci a k použití

ⒸE Instrucciones de montaje y de manejo

ⒸST Paigaldamine ja kasutamine

ⒸF Instructions de montage et d'utilisation

ⒸGB Installation and operating instructions

ⒸGR ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ

ⒸH Szerelési és használati utasítás

ⒸI Istruzioni di montaggio e per l'uso

ⒸLT Montavimo ir naudojimo instrukcija

ⒸLV Montāžas un lietošanas instrukcija

ⒸNL Montagehandleiding en Gebruiksaanwijzing

ⒸPL Instrukcja montażu i obsługi

ⒸRO Instrucțiuni de montaj și utilizare

ⒸRUS Руководство по монтажу и эксплуатации

ⒸSK Návod na montáž a obsluhu

ⒸSLO Navodila za montažo in uporabo

ⒸUA Інструкція по монтажу та експлуатації

ⒸUAE تعليمات التركيب والتشغيل

