


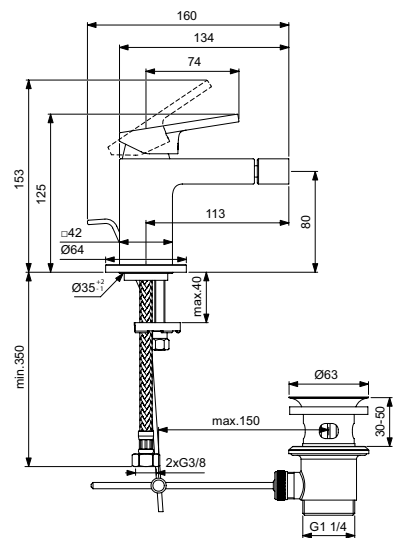


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - B 961863 XX
- 2 - A 963751 NU
- 3 - B 961861 XX
- 4 - A 963299 NU
- 5 - A 861399 NU
- 6 - F 960876 XX
- 7 - B 961862 XX
- 8 - A 961230 AA
- 9 - B 961800 XX
- 10 - A 964520 NU
- 11 - A 962370 NU
- 12 - B 960900 XX
- 13 - A 861421 XX
- 14 - A 962708 NU





B D511 ..

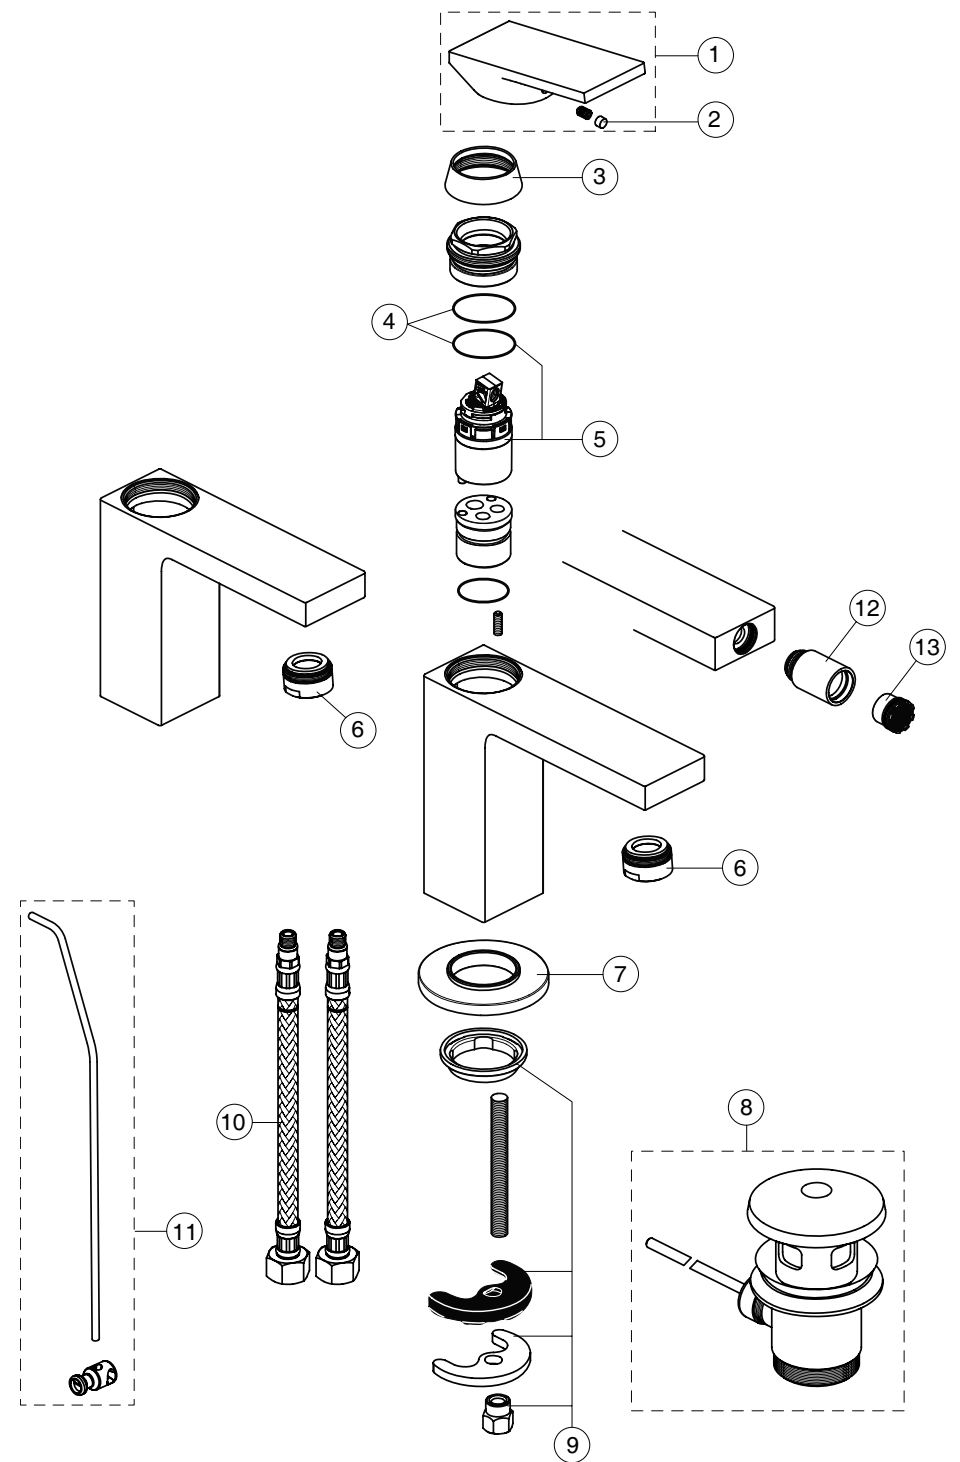


EXTRA

Ideal Standard


10.2022 / B565255

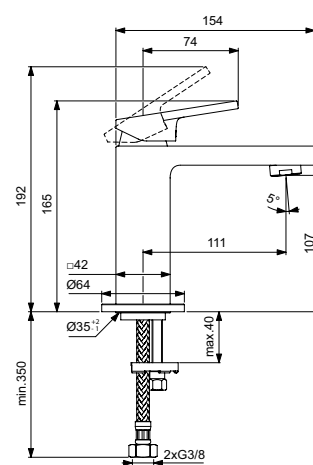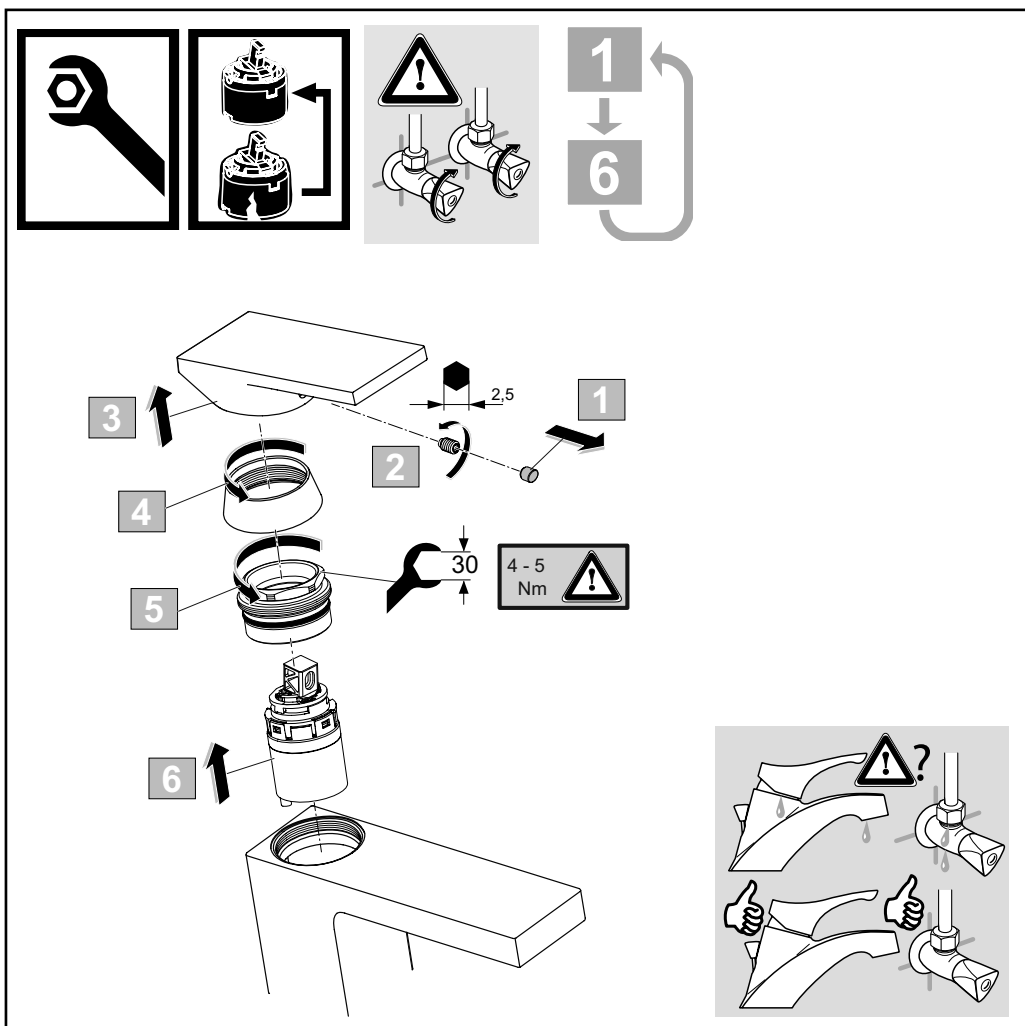


B D501 ..

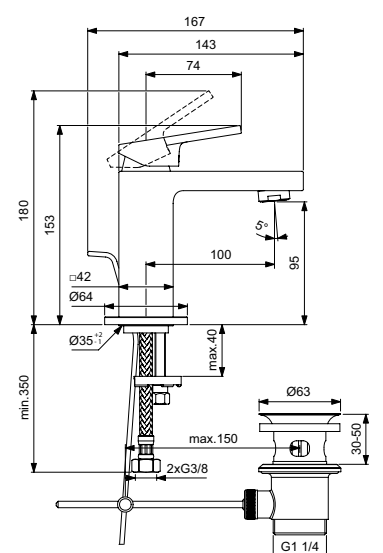

B D502 ..

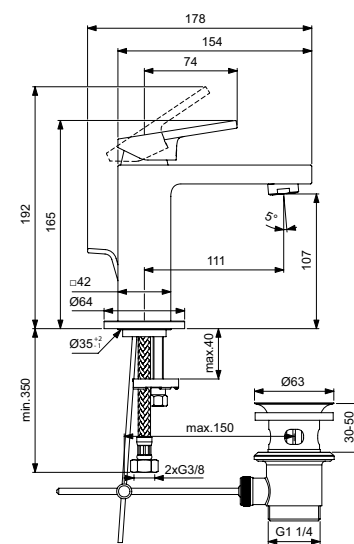

B D500 ..

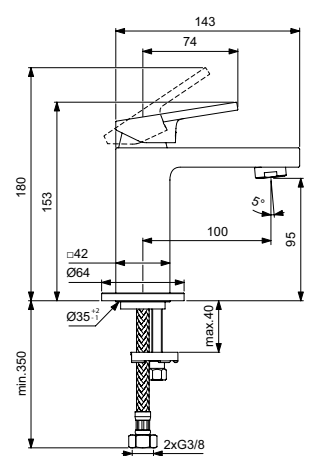

B D503 ..



Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

<http://www.idealstandardinternational.com>

