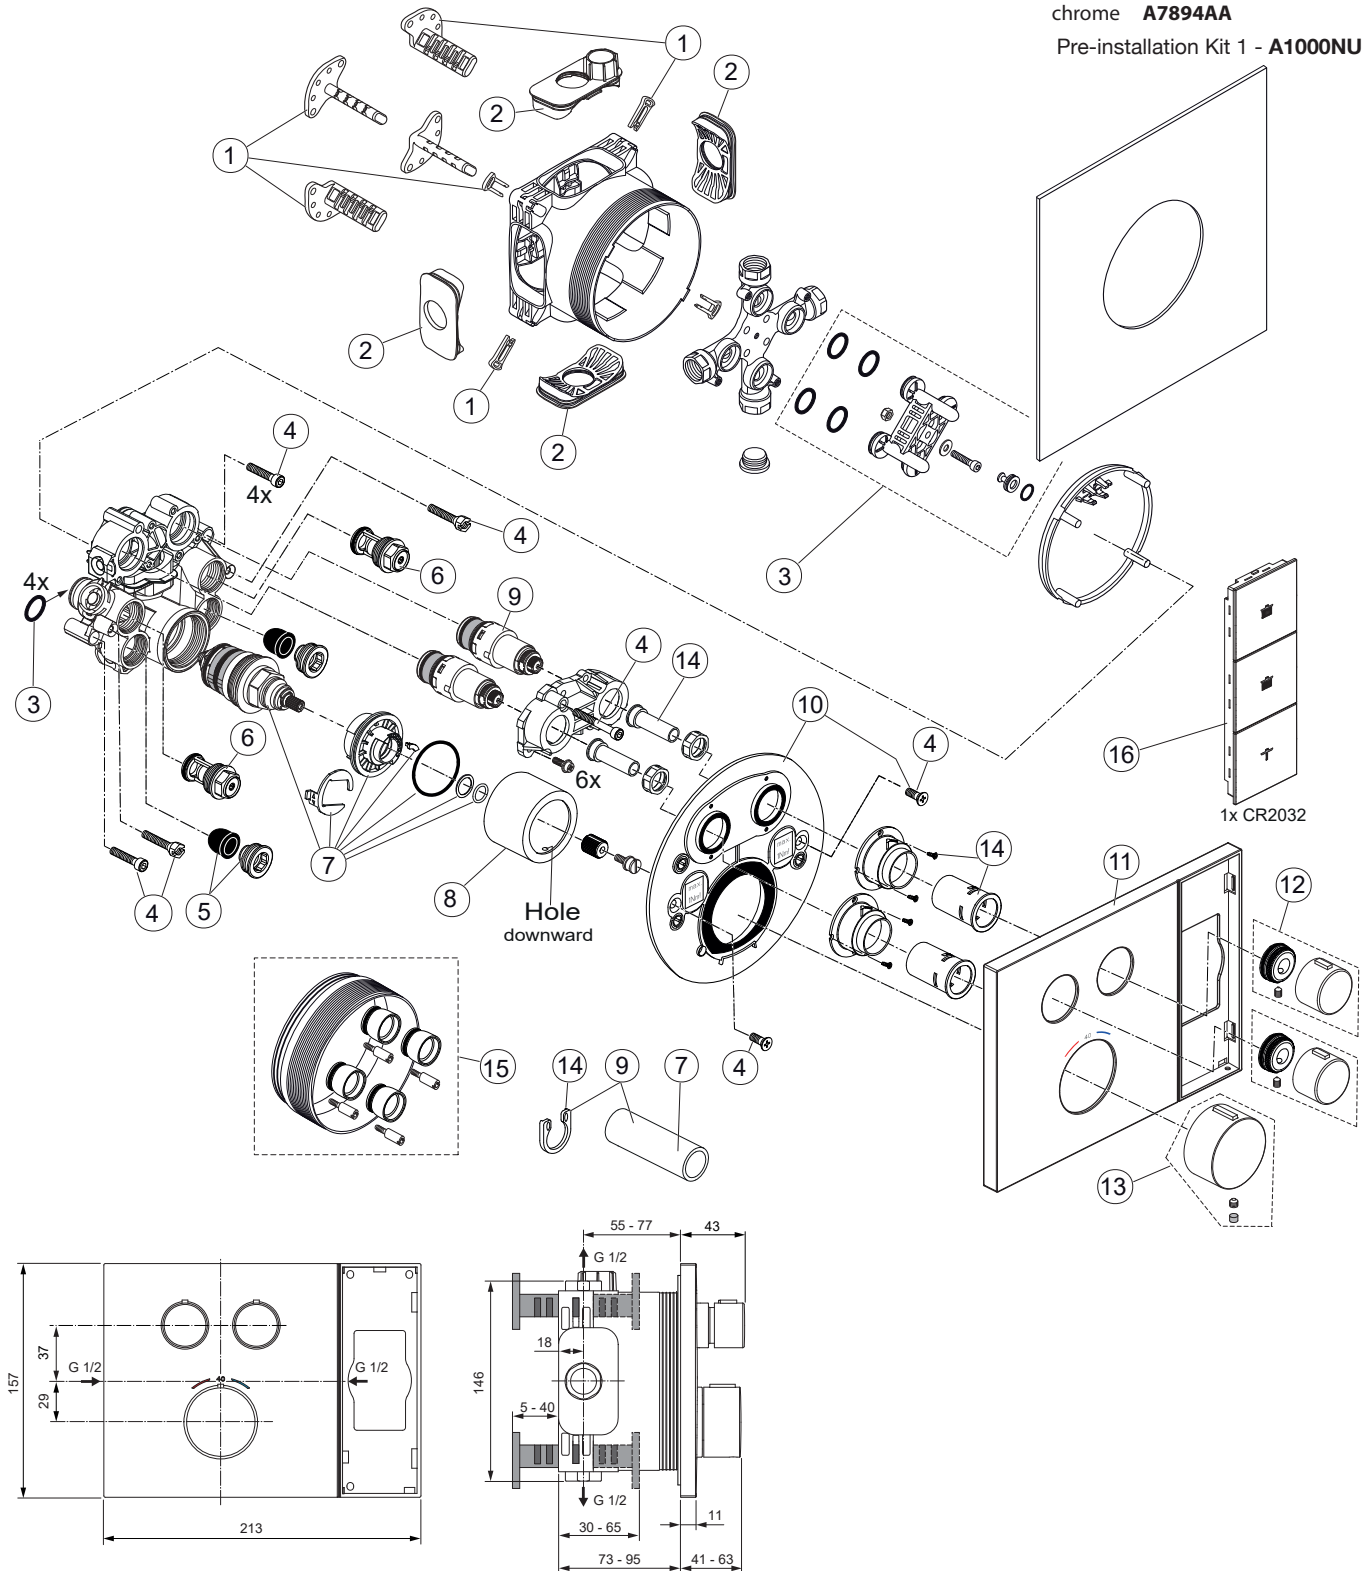


Produced from: **July 2023**

Shower built-in thermostat
chrome **A7894AA**

Pre-installation Kit 1 - **A1000NU**

Replace XX with the appropriate finish code

Chrome = AA Silver Storm = GN Gold = A2 Magnetic Grey = A5 Silk Black = XG

Example spare part order:

A 861 577 AA in Chrome

Pos.	Description	Part-Number	Qty.	Pos.	Description	Part-Number	Qty.
1	Install. depth adjust.	A 963 131 NU	1 Set	10	Escutcheon holder cpl.	A 861 578 NU	1 Set
2	Side sealing	A 963 132 NU	1 Set	11	Escutcheon	A 861 736 XX	1 pcs
3	Flushing device cpl.	A 963 146 NU	1 Set	12	Handle Vol.	A 861 737 XX	1 Set
4	Screw set complete	A 960 890 NU*	1 Set	13	Handle Temp.	A 861 738 XX	1 Set
5	Low noise insert	A 960 891 NU	1 pcs	14	Set adjustment	A 861 582 NU*	1 Set
6	Stop valve	A 960 706 NU	2 pcs	15	Extension kit 20mm	A 960 704 NU	1 Set
7	Cartridge Set	A 861 575 NU	1 Set		Extension kit 40mm	A 962 476 NU	1 Set
8	Cover	A 861 577 XX	1 Set	16	Remote control	A 861 733 XX*	1 Set
9	Push Valve	A 861 576 NU	1 pcs		*1 Universal set (not all parts needed)		

C-Therm Navgo Solos

**Universal set (not all parts needed)*

C-Therm Navigo Solos

C-Therm Navgo Solos