


MONTAGEANLEITUNG


notice de montage
assembling instructions
istruzioni per l'installazione
instrucciones para el montaje
wenken voor het montage
Installationsvejledning
instruções de montagem

92630

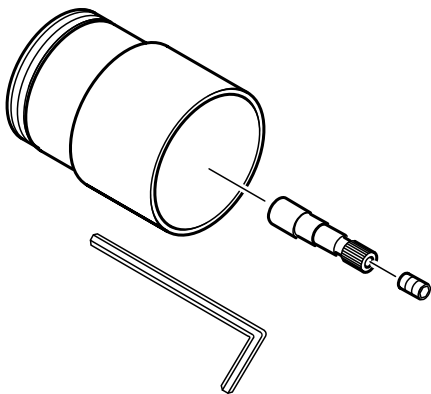

hansgrohe®

IDEEN FÜR'S BAD. SEIT 1901.

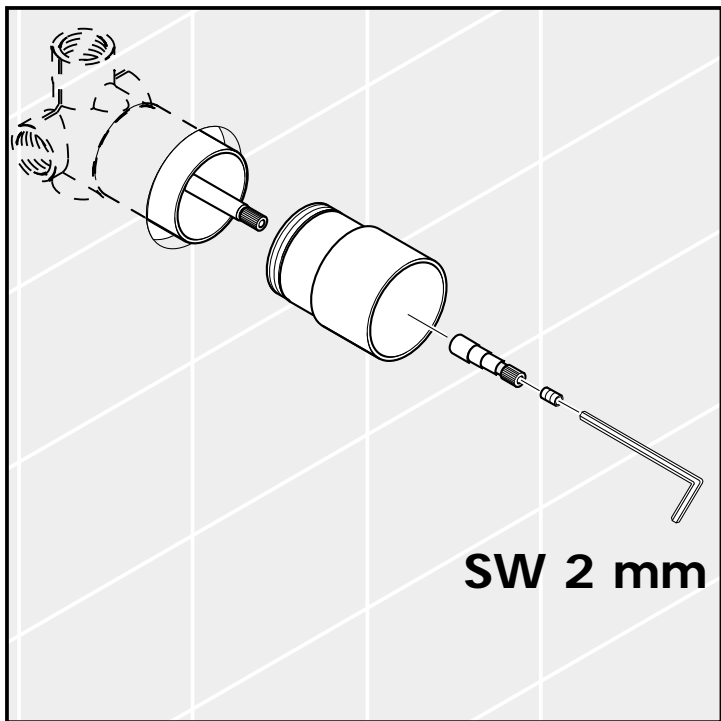

SW 2 mm

hansgrohe[®]
IDEEEN FÜR'S BAD. SEIT 1901.

4/1997
9.06782.01